
Industrial Air Heaters

EH & HVT


Industrial Convection Heaters

- · Without Thermostat (type EH)
- With Thermostat (type HVT)
- · 250 1,000 Watts
- · 853 3,412 Btuh
- · 120 and 240 Volt
- · Single Phase

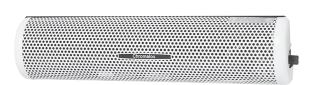



Dimensions (Inches)

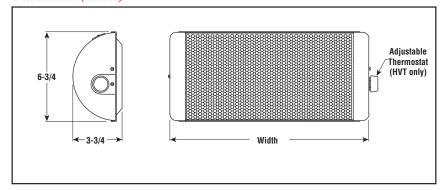

Description

EH and HVT industrial convection heaters are designed for the highest dependability for rough plant areas and small manned or unattended areas.

Applications

- · Crane Cabs
- · Shop Offices
- · Small Plant Areas
- · Non-Hazardous Pump Sheds

Construction

Cabinet — Heavy gauge perforated steel case finished in corrosion resistant almond polyester powder coat paint.

Heating Elements are strip type construction and are the most rugged, durable, long-lasting elements available to industry.

Built-in Thermostat — (HVT only). Furnished standard to provide temperatures from 50°F - 110°F.

Advantages

- · Long Life
- · Rugged for High Traffic Areas
- · Easy Installation
- · Corrosion Resistant

CAUTION — Not intended for use where flammable vapors, gases, liquids or other combustible atmospheres are present.

Specifications and Ordering Information

| | | | | | Dimensions (In.) | | | | | | Wt. |
|---|-------|-------|------|-------|------------------|--------|-------|----------|-------|--------|--------|
| kW | Volts | Phase | Amps | Btuh | Height | Width | Depth | Model | Stock | PCN | (Lbs.) |
| EH — Without Thermostat | | | | | | | | | | | |
| 0.25 | 120 | 1 | 2.1 | 853 | 6-3/4 | 14-5/8 | 3-3/4 | EH-1221 | S | 261833 | 7 |
| 0.25 | 240 | 1 | 1 | 853 | 6-3/4 | 14-5/8 | 3-3/4 | EH-1221 | NS | 261841 | 7 |
| 0.5 | 120 | 1 | 4.2 | 1,706 | 6-3/4 | 14-5/8 | 3-3/4 | EH-1251 | S | 261850 | 7 |
| 0.5 | 240 | 1 | 2.1 | 1,706 | 6-3/4 | 14-5/8 | 3-3/4 | EH-1251 | NS | 261868 | 7 |
| HVT — With Thermostat | | | | | | | | | | | |
| 0.5 | 120 | 1 | 4.2 | 1,706 | 6-3/4 | 28-5/8 | 3-3/4 | HVT-1251 | S | 240055 | 13 |
| 1 | 120 | 1 | 8.3 | 3,412 | 6-3/4 | 28-5/8 | 3-3/4 | HVT-2411 | S | 240071 | 15 |
| Stock Status: S = stock NS = non-stock | | | | | | | | | | | |
| To Order—Specify model, PCN, kW, volts, phase and quantity. | | | | | | | | | | | |

Refer to WR-80, WR-90 in the Controls section.

